


Day-5: Connection b/w 2 PC:-

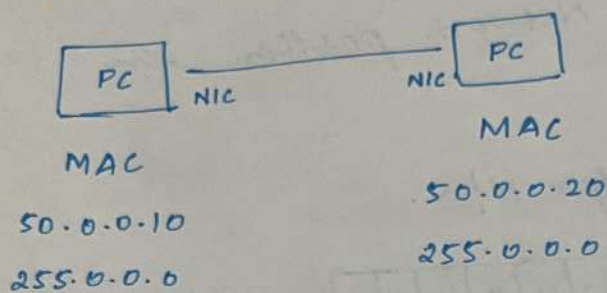


Directly connected device should be in same network.

* Command to check the network reachability:

"Ping target ip" (or) "Ping target name"

Here the target ip is 50.0.0.20,

So Ping 50.0.0.20.

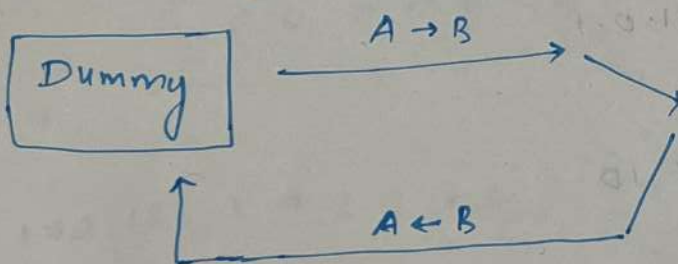

Target comp. name:

Ping sys2.

* This uses a protocol called as Netbios

Netbios $\rightarrow$ Name = ip.

It sends out a request & resolves a name into IP.

* We can also share data by forming a network.

* From system 2, create a folder and share it. We can download the folder from system 1. So without using any app we can share the files using network.

RDP → Remote Desktop protocol.

We can access another PC from our PC by using RDP.

sysdm.cpl - For opening system properties

mstsc - For opening RDP.

For IP configuration:

ncpa.cpl - It opens the network condition.

→ First we have to configure both the PC's & we can check it whether ip is configurated:

cmd → ipconfig

This returns the IP that we configurated in the PC.